

POLISHER

Safety Precautions -

- * Do not use this machine as a step or to move furniture.
- * When disconnecting power cord from electrical outlet, grasp the plug. Pulling it out by the cord itself can damage cord insulation and internal connection to plug.
- * To prevent injury, always remove the electrical plug from electrical outlet before changing the polishing pad and before leaving the machine.
- * To prevent damage to the power cord, do not let the pad, pad driver or wheels touch the power cord when the machine is running. Always lift the power cord over the machine.

Operation

- * To attach the pad holder, be sure the handle is "locked" in the upright position. Lay the floor machine on its back with the handle lying on the floor exposes the driving plate on the underside of the floor machine. Holding the pad holder in both hands and straddling the motor with your back to the handle box, bend over and fit the three slots of the clutch plate over the three lugs of the driving plate. Turn the pad holder counter-clockwise as far as it will go until it is seated in the ready-to-use position.
- * Return the floor machine to upright position and adjust handle to operating position. Recommended handle position is close to the waist with arms extended down. Lock the cam release lever into position.

NOTE: The hardened steel cam release lever does not require extreme tightening to effectively hold the handle in position.

- * To remove the pad holder, lay the floor machine on its back again and disengage clutch plate slots from driving plate lugs by turning clockwise.

How to Operate the Machine

With the pad holder in place and the handle locked in position place hands on the handle grips and squeeze the switch triggers beneath the handle grips.

CAUTION: When leaving the machine unattended, disconnect the wall plug and return the handle to the locked upright position to prevent accidental starting.

How to Guide The Floor Machine

To Right: raise handle slightly. The higher the handle is lifted, the faster the machine will move to the right.

To Left: to change direction, lower the handle until the machine travels to the left. The more the handle is lowered, the faster the movement to the left.